



Date: 08/03/2017

APEM Distributors
APEM EOL announcement
Re: DA/DP dip switch series

Effective 08/31/2017, APEM will no longer be offering the DA/DP dip switches. The product is being replaced by NDA/NDP series. The attached shows the differences in the two part series. There is some existing inventory still in Haverhill and this inventory will be available on a first come first serve basis. If you wish to return any inventory of these items from your shelves, you may with a replacement order of equal or greater value for the new ND version. If no replacement order, you will have to wait until you are awarded a stock rotation based on your annual schedule. APEM will service all existing open orders acknowledged to date.

Part Numbers effected:

DA02	Right-Angle DIP Switch
DA02T	Right-Angle DIP Switch
DA03	Right-Angle DIP Switch
DA03T	Right-Angle DIP Switch
DA03TN	Right-Angle DIP Switch
DA04	Right-Angle DIP Switch
DA04KV	Right-Angle DIP Switch
DA04T	Right-Angle DIP Switch
DA04TN	Right-Angle DIP Switch
DA05	Right-Angle DIP Switch
DA05T	Right-Angle DIP Switch
DA05TN	Right-Angle DIP Switch
DA06	Right-Angle DIP Switch
DA06BTV	Right-Angle DIP Switch
DA06T	Right-Angle DIP Switch
DA06TN	Right-Angle DIP Switch
DA07	Right-Angle DIP Switch
DA07BT	Right-Angle DIP Switch
DA07T	Right-Angle DIP Switch
DA07TN	Right-Angle DIP Switch
DA08	Right-Angle DIP Switch
DA08BTN	Right-Angle DIP Switch
DA08BTV	Right-Angle DIP Switch
DA08T	Right-Angle DIP Switch
DA08TN	Right-Angle DIP Switch
DA09	Right-Angle DIP Switch
DA09T	Right-Angle DIP Switch
DA10	Right-Angle DIP Switch
DA10T	Right-Angle DIP Switch
DA10TN	Right-Angle DIP Switch
DA12	Right-Angle DIP Switch
DA12BTN	Right-Angle DIP Switch
DA12T	Right-Angle DIP Switch
DP02	Piano Style DIP Switch
DP02T	Piano Style DIP Switch
DP03	Piano Style DIP Switch
DP03T	Piano Style DIP Switch



DP04	Piano Style DIP Switch **EOL
DP04T	Piano Style DIP Switch
DP05	Piano Style DIP Switch
DP05T	Piano Style DIP Switch
DP06	Piano Style DIP Switch
DP06T	Piano Style DIP Switch
DP07	Piano Style DIP Switch
DP07T	Piano Style DIP Switch
DP08	Piano Style DIP Switch
DP08T	Piano Style DIP Switch
DP09	Piano Style DIP Switch
DP09T	Piano Style DIP Switch
DP10	Piano Style DIP Switch
DP10T	Piano Style DIP Switch
DP12	Piano Style DIP Switch
DP12T	Piano Style DIP Switch
DPL02	Piano Style DIP Switch
DPL02T	Piano Style DIP Switch
DPL03	Piano Style DIP Switch
DPL03T	Piano Style DIP Switch
DPL04	Piano Style DIP Switch
DPL04T	Piano Style DIP Switch
DPL04U	Piano Style DIP Switch
DPL05	Piano Style DIP Switch
DPL05T	Piano Style DIP Switch
DPL06	Piano Style DIP Switch
DPL06T	Piano Style DIP Switch
DPL06TVAM	Piano Style DIP Switch
DPL06UT	Piano Style DIP Switch
DPL07	Piano Style DIP Switch
DPL07T	Piano Style DIP Switch
DPL08	Piano Style DIP Switch
DPL08T	Piano Style DIP Switch
DPL08TN	Piano Style DIP Switch
DPL09	Piano Style DIP Switch
DPL09T	Piano Style DIP Switch
DPL10	Piano Style DIP Switch
DPL10T	Piano Style DIP Switch
DPL12	Piano Style DIP Switch
DPL12BUTV	Piano Style DIP Switch
DPL12T	Piano Style DIP Switch
DPL12UBT	Piano Style DIP Switch
DPL12UTV	Piano Style DIP Switch