

This all-in-one UMRF tool is designed to mate and unmate UMRF plug with the receptacle to assure that UMRF plug would not be damaged with inappropriate usage !

• How to mate the UMRF plug with the receptacle ?

1. Insert the tool to the flanges at UMRF plug



2. Align the plug to mating axes of the receptacle, and insert vertically until "click" heard to complete mated connection (Note 1)




• How to unmate the UMRF plug from the receptacle ?

3. Insert the tool to the flanges at UMRF plug




4. Pull the plug off vertically (Note 2)

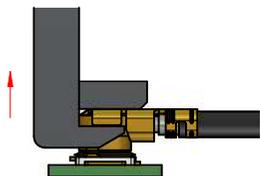


**Order Code :** 600636001

 **Material :** Stainless steel




**Special Notes :**

**Note 1 :** Do not apply extreme angle when you insert the UMRF Plug to the receptacle

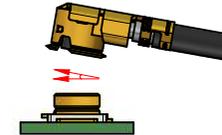

**Note 2 :** Never pull UMRF directly by hands since it might be damaged

**Note 3 :** While UMRF plug is being mated with the receptacle, please do not apply pull force higher than defined values indicated in below diagram

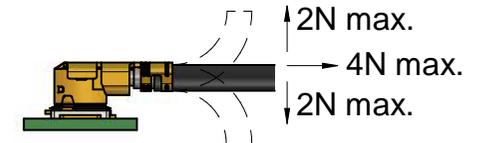

**Applicable Products :**

WR-UMRF 6362 series

Würth Elektronik eiSos GmbH & Co. KG  
EMC & Inductive Solutions

Max-Eyth-Str. 1  
74638 Waldenburg  
Germany  
com. +49 79 42 945 - 0

www.we-online.de  
eiSos@we-online.de



CREATED BMa	CHECKED OTs		
DESCRIPTION <b>UMRF Insertion &amp; Extraction Tool Manual Instruction</b> <b>600 636 001</b>			
REVISION 002.001	STATUS	DATE 2020-10-06	BUSINESS UNIT eiCan