



Features

- Measures 4-20mA or 0-20mA current loop process signals
- 32 user-selectable span (display) ranges
- Bright 1" red LED display, readable at distance of 80 feet (~24 m)
- Adjustable display brightness
- Wide common-mode input range (±48V)
- Digital filter for optimizing measurements in electrically noisy environments
- Operates from an external 12VDC power supply
- Mounts with adhesive strips (supplied) or screws
- 0.1% typical accuracy
- Two-year warranty


PRODUCT OVERVIEW

DMS01-CL-RS12-C is a robust digital panel meter that provides precise measurement and display of current loop process signals on a highly visible red 1" (25mm) tall, 4 1/2 digit seven-segment LED display with adjustable brightness. It provides selectable 4-20 mA or 0-20 mA current range, up to 32 display ranges and choice of user calibration or factory calibration modes. An external 12VDC power source provides power to the meter. An internal DC-DC converter accommodates a +/-48V common-mode measurement range with respect to the power supply input, simplifying a wide range of measurement applications and an internal digital filter enhances performance in electrically noisy environments making this digital panel meter is ideal for laboratory instrumentation, factory automation, and any application requiring precision measurement.

ORDERING INFORMATION:

DMS01-CL-RS12-C

Digital Current Loop Process Meter, 1" Red Display, 12VDC Power

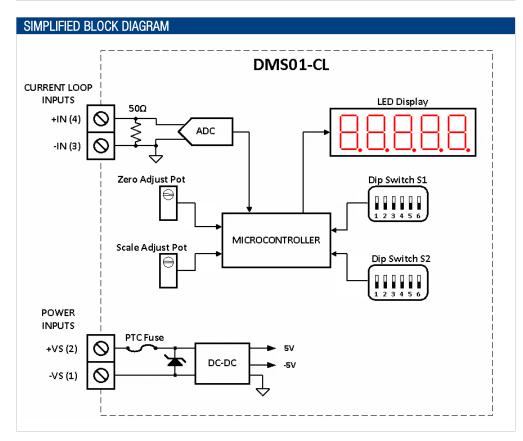



Parameter	Min	Min Typ				
Supply Voltage (Operating)	11	12	13	V		
Absolute Maximum Supply Voltage	-1		+14	V		
Supply Current ¹ (Operating at maximum intensity)			100	mA		
(Operating at minimum intensity)			60	mA		
Digits (Displayed)	3.5 - 4.	5, depending on disp	lay range			
Digit Height		1 (25.4)		inch (mm)		
Display Update Rate		3.5		Sa/s		
Decimal Selection	Manual, (fixed					
Display Color		input current) Red (627nm pk)				
Over-range indication						
Measurement range (0-20mA range)	0		20	mA		
Display Span Range (unipolar mode)	20	2000 to 20,000, 32 codes				
(bipolar mode)		-9500 to +9500				
Accuracy		0.1%	1%			
Zero-Offset (0-20mA range)	-2		+2	count		
Input Impedance		50		Ω		
Offset Trim Range	±5% of span r					
Gain Trim Range	variable,					
Temperature Drift (0 to +50°C)		8.0		count/°C		
Absolute Maximum Input Current (-IIN to +IIN)	-40		+40	mA		
Common-Mode Input Range (-VIN) to (-VS)	-48		+48	V		

¹ based on a display value of "1.888"

PHYSICAL/ENVIRONMENTAL				
Parameter	Min	Тур	Max	Units
Operating Temperature	0		+50	°C
Storage Temperature	-40		+75	°C
Humidity (Non-condensing)			85	%RH
Weight		6.14 (174)		oz (g)

User Controls	
Brightness	single-turn potentiometer
Offset and Gain Adjustment	QTY 2 12-turn trim potentiometers
Dipswitch configuration setting for: - Input current range - Digital filter enable - Span (display) range - Unipolar / Bipolar mode - Trim enable	QTY 2 6-position Dipswitches (S1 & S2)
Overall Dimensions	5.86 (149) L x 3.36 (86) W x 1.43 (37) H inch (mm)


Terminal Blocks	Min	Тур	Max	Units
Wire Size	24		14	AWG
Insulation Strip Length		0.25 (6)		inch (mm)
Screw Tightening torque		56.6 (0.4)		oz-in (N-m)



MEASUREMENT TYPE AND CAPABILITIES:

- Measures 4-20 or 0-20 mADC current loop process signals with 32 user-selectable span ranges (via S1, S2), displaying 3-1/2 to 4 1/2 digits of resolution.
- > Two user-selectable modes of operation: unipolar (supporting only positive readings) or bipolar (supports negative output readings).
- The meter's measurement terminals are electrically isolated from the power terminals through a DC-DC converter, providing a high common-mode input range (+/-48V) for the input (relative to the power terminals), simplifying a wide range of measurement applications.
- Meter requires an external 12VDC power supply (not included).

REAR PANEL LAYOUT: SCREW TERMINAL CONNECTIONS & CONTROLS

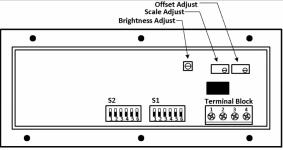


Terminal Block							
Terminal # Name Function							
1	-VS	Dowar Cupply Tormingle (+10\/DC)					
2	+VS	Power Supply Terminals (+12VDC)					
3	-IN	Massurament Input Tarminala					
4	+IN	Measurement Input Terminals					

Brightness Adjust — This single-turn potentiometer supports adjustment of the meter's LED display brightness for maximum readability. Turning the pot clockwise increases brightness, while turning it counterclockwise decreases brightness.

Offset Adjust — This 12-turn potentiometer supports the offset adjustments of the span ranges. See the span range selection table for the maximum allowed offset for each span range. Turning the pot clockwise will give a negative offset, while turning it counterclockwise gives a positive offset. Gain Scale Adjust — This 12-turn potentiometer supports gain adjustments of the span ranges. This allows the user to select values between each of the span ranges, between 1780 to 20300 (unipolar mode) and -9785 to 9785 (bipolar mode). See the span range selection table for the maximum allowed gain for each span range. Turning the pot clockwise decreases (-) the gain, while turning it counterclockwise increases (+) the gain (see Span Ranges below).

S1 & S2 - 6-position dipswitches provided for configuration the meter's various options. See Meter Configuration below for details.

CONNECTION EXAMPLES:

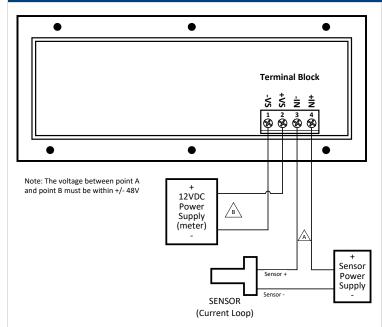

This example illustrates an application where the Current sensor is connected to terminals 3 and 4, where terminal 3 is the negative input terminal (-IN) and terminal 4 is the positive input terminal (+IN).

The 12V power supply (not included) connects to terminals 1 and 2, where terminal 1 is the negative power supply terminal (-VS) and terminal 2 is the positive power supply terminal (+VS) and the sensor is powered from a separate external power supply. Note: it is possible to power both the sensor and the meter from the same power supply provided the sensor can operate from ± 12 VDC.



METER CONFIGURATION


This Meter is configured through two 6 position dipswitches S1 and S2 on the back of the meter. Each switch position is identified by SW#. For example, SW1 is switch 1 on S1, and controls the input range, while SW1 on S2 selects of one the span ranges. The following illustrate the possible configurations:

configurations:		or, and controlo	tho input ru	ngo, willo o	VV 1 011 02 0010	010 01 0110 1110	o opan rango	5. THE TOHOWING HIGH	orato trio possibio	
Input Range Se					_					
Input Ran	ge	SW1	Dipsw	itch S1	Description	1				
4-20mA		OFF		4 5 6	SW1 on S1 controls the meter's input range. In the OFF position the input					
0-20mA		ON	ON 1 2 3	4 5 6	range is 4-20 mA, while in the ON position the meter's range is 0-20 m/s					
Digital Filter On/Off Slection										
Digital Filt	er	SW2	Dipsw	itch S1	Description	n				
OFF		OFF	ON	4 5 6	is disabled	and readings	are updated	al filter. In the OFF p at maximum speed	. In the ON	
ON		ON	ON	4 5 6	 position, the filter is enabled, and readings are processed through a m average filter, which results in more stable readings, but a slower response. 					
Unipolar/Bipola	ar Mode Selection	on								
Mode		SW2	Dipsw	itch S2	Description	n				
Unipolar Bipolar		OFF		4 5 6	Bipolar mode allows the user to display negative values. For example, if meter is set to 0-20 mA input, span of 6000 and set in unipolar mode, then 0 mA input results in a count of 0 on the display, while 20 mA input results in a count of 6000 on the display. If the meter is set to bipolar mode with the same settings, 0 mA input results in a count of -6000 on the display, while 20 mA results in a count of +6000 on the display. SW2 or S2 controls whether the meter is in unipolar or bipolar mode. Unipolar mode can display values between 0 to +20000 depending on the span range setting. Bipolar mode can display values between -9500 to +9500 depending on the span range setting. The bipolar range is not offered beyond ±9500 because of display limitations.				inipolar mode, nile 20 mA input set to bipolar mode 6000 on the display. SW2 on ode. Unipolar ng on the span -9500 to +9500	
Span Range Se	election			_						
Span Range	Gain Adjustment	Offset Adjustment	S2 SW1	SW3	SW4	S1 SW5	SW6	Dipswitch S2	Dipswitch S1	
Input Current (mA)	N/A	N/A	OFF	OFF	OFF	OFF	OFF	ON 1 2 3 4 5 6	ON	
2000	220 ±2	100 ±2	OFF	ON	OFF	OFF	OFF	ON 1 2 3 4 5 6	ON	
2500	288 ±2	125 ± 1	OFF	OFF	ON	OFF	OFF	ON 1 2 3 4 5 6	ON	
3000	255 ±2	150 ±2	OFF	ON	ON	OFF	OFF	ON 1 2 3 4 5 6	ON	
3500	263 ±2	175 ±2	OFF	OFF	OFF	ON	OFF	ON ON O	ON	





Span Range Se	election continu	ed							
Span Range	Gain Adjustment	Offset Adjustment	S2 SW1	SW3	SW4	1 SW5	SW6	Dipswitch S2	Dipswitch S1
4000	260 ±2	200 ±2	OFF	ON	OFF	ON	OFF	ON 1 2 3 4 5 6	ON
4500	270 ±2	225 ±2	OFF	OFF	ON	ON	OFF	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6
5000	250 ±2	250 ±2	OFF	ON	ON	ON	OFF	ON	ON
5500	275 ±2	275 ±2	OFF	OFF	OFF	OFF	ON	ON	ON
6000	270 ±2	300 ±2	OFF	ON	OFF	OFF	ON	ON	ON
6500	260 ±2	325 ±2	OFF	OFF	ON	OFF	ON	ON	ON
7000	280 ±2	350 ±2	OFF	ON	ON	OFF	ON	ON	ON
7500	263 ±2	375 ±2	OFF	OFF	OFF	ON	ON	ON	ON
8000	280 ±2	400 ±2	OFF	ON	OFF	ON	ON	ON	ON
8500	298 ±2	425 ±2	OFF	OFF	ON	ON	ON	ON	ON
9000	270 ±2	450 ±2	OFF	ON	ON	ON	ON	ON	ON
9500	285 ±2	475 ±2	ON	OFF	OFF	OFF	OFF	ON	ON
10000	250 ±2	500 ±2	ON	ON	OFF	OFF	OFF	ON 1 2 3 4 5 6	ON
10500	263 ±2	525 ±2	ON	OFF	ON	OFF	OFF	ON	ON
11000	275 ±2	550 ±2	ON	ON	ON	OFF	OFF	ON H	ON
11500	288 ±2	575 ±2	ON	OFF	OFF	ON	OFF	ON	ON
12000	300 ±2	600 ±2	ON	ON	OFF	ON	OFF	ON	ON
12500	250 ±2	625 ±2	ON	OFF	ON	ON	OFF	ON	ON
13000	260 ±2	650 ±2	ON	ON	ON	ON	OFF	ON	ON





Span Range	Gain	Offset	S2			S1		Dipswitch S2	Dipswitch S1		
opan nange	Adjustment	Adjustment	SW1	SW3	SW4	SW5	SW6	•			
13500	270 ±2	675 ±2	ON	OFF	OFF	OFF	ON	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6		
14000	280 ±2	700 ±2	ON	ON	OFF	OFF	ON	ON 1 2 3 4 5 6	ON		
15000	750 ±2	750 ±2	ON	OFF	ON	OFF	ON	ON 1 2 3 4 5 6	ON		
16000	320 ±2	800 ±2	ON	ON	ON	OFF	ON	ON 1 2 3 4 5 6	ON		
17000	765 ±2	850 ±2	ON	OFF	OFF	ON	ON	ON 1 2 3 4 5 6	ON		
18000	270 ±2	900 ±2	ON	ON	OFF	ON	ON	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6		
19000	760 ±2	950 ±2	ON	OFF	ON	ON	ON	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6		
20000	300 ±2	1000 ±2	ON	ON	ON	ON	ON	ON 1 2 3 4 5 6	ON		
Decimal Point S	Selection										
Decimal Placement	SW3	SW4	SW5	Dipswi	tch S2						
0000	OFF	OFF	OFF	ON 1 2 3	1						
0.000	ON	OFF	OFF	ON	fixed at 0		When measuring the physical current the decimal placement is fixed at 00.00. When any of the span range switches are turned ON the decimal point placement has to be manually selected.				
00.00	OFF	ON	OFF	ON	4 5 6	SW3 through SW5 on S2 control the decimal point placement options as shown in the table.					
000.0	OFF	OFF	ON	ON							
Trim Enable Se											
Trim E	nable	able SW6 Dipswitch S2		QTY 2 potentiometers for adjusting gain and offset are 6 by SW6 on S2. In the "OFF" position, the trim is disabled							
OF	F	OFF			4 5 6	meter runs from factory calibrated s position the trim is enabled, allowing offset of the span range. The gain adj		calibrated span rar ed, allowing user to The gain adjustment	nges. In the "ON vary the gain ar allows the user		
OI	V	ON		ON		adjust the span of the meter to any number betw 20300 (unipolar mode) and -9785 to +9785 (bipothe span range setting (see span range table above is out of calibration the operator can use the adjustment for correction only when one of the settings is set, not when displaying the physical in			(bipolar mode) wi above). If the met the gain or offs f the span rang		



TECHNICAL NOTES



Calibration

This meter is calibrated at the factory at the time of manufacture. If the meter is out of calibration, the operator can use the gain or offset adjustment (Trim Enable) for correction, only when one of the span range settings is set, not when displaying the physical input voltage. However, calibration may no long be within datasheet specifications.

2. Protection and Fusing

This meter contains an internal PTC fuse as well as other protective elements that are intended for protection against brief electrical transients and misconnect conditions. Additional external protective components such as fuses and transient suppressors may be required depending on the application in which the meter is deployed.

3. Noisy Power Supplies


In systems with noisy power supplies, connecting an external, non-polarized capacitor across the +VS and -VS inputs can help reduce measurement errors. In certain situations, the use of twisted pair or shield wiring may be required.

4. Installation

IMPORTANT! To ensure safe and reliable operation, this meter must be installed and serviced by qualified technical personnel. Contact Murata Power Solutions if there is any doubt regarding their installation or operation.


5. Over-range Limit

The meter will flash on and off when the meter exceeds its minimum or maximum input current. For example, if the meter is set in the 0-20 mA range, any input current below 0 mA or above 20 mA will cause the display to flash on and off.

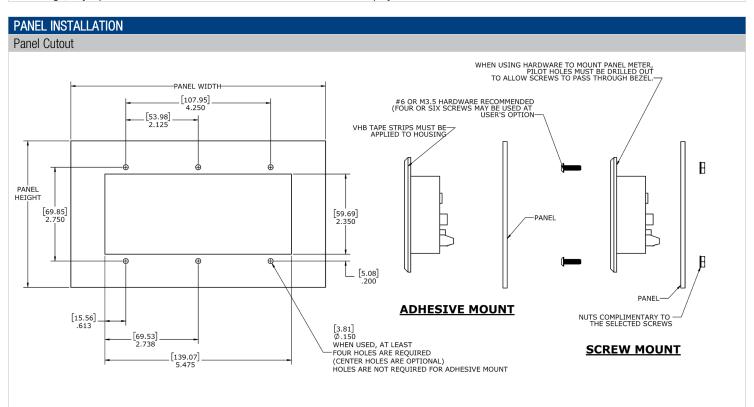

Note: When mounting panel meter with hardware, a four hole pattern (four outermost holes) or the six hole pattern may be used at the customer's option.



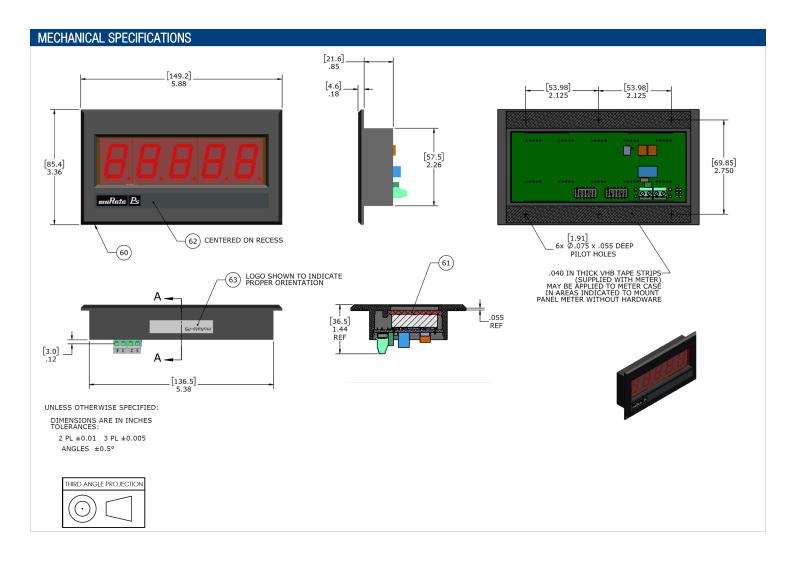

APPLICATION NOTES							
Document Number	Description	URL Link to Document					
DMS-AN25	Application Note: DMS01 Meter Measurement and Calibration	Click to open application note					

Murata Power Solutions, Inc. 129 Flanders Rd. Westborough, Ma 01581, USA. ISO 9001 and 14001 REGISTERED



This product is subject to the following operating requirements and the Life and Safety Critical Application Sales Policy:
Refer to: https://www.murata-ps.com/requirements/

Murata Power Solutions, Inc. makes no representation that the use of its products in the circuits described herein, or the use of other technical information contained herein, will not infinge upon existing or future patent rights. The descriptions contained herein do not imply the granting of licenses to make, use, or sell equipment constructed in accordance therewith. Specifications are subject to change without notice.

©2020 Murata Power Solutions, Inc..